

Alps adjustable series installation instructions


1.

SERIES	CUT-OUT	SERIES	CUT-OUT
DR01102	Ø75mm	DR01101	Ø75mm
DR01116	Ø75mm	DR01115	Ø75mm
DR01104	Ø100mm	DR01103	Ø100mm
DR01120	Ø100mm	DR01119	Ø100mm
DR01106	Ø125mm	DR01105	Ø125mm
DR01124	Ø125mm	DR01123	Ø125mm
DR01108	Ø150mm	DR01107	Ø150mm
DR01110	Ø200mm	DR01109	Ø200mm
DR01111	Ø75mm	DR01112	Ø100mm
DR01113	Ø125mm	DR01114	Ø150mm


2.

Installation Instructions:


1 Cut a hole (suitable ceiling thickness: 8~20mm)

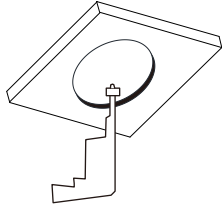


2 Connect with the mains supply with cables match

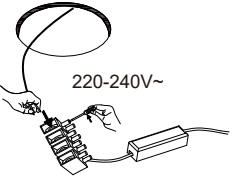

3 Tidy the wire, put the driver into the ceiling

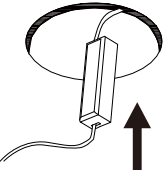


4 Press clips to push the light into the cutout. Rip off the protective film after installation.

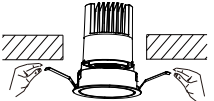


The specific appearance is subject to the real product !

3.

Schematic diagram of adjustable swing angle:

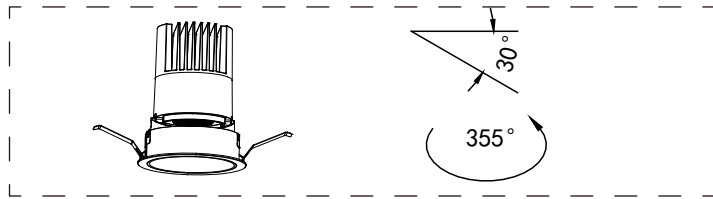

The following is the self-locking function of the lamp swing angle(DR01108 has this function)

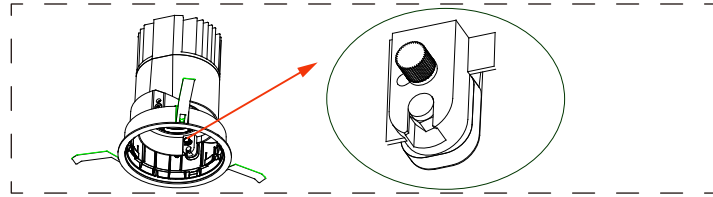


The following steps are for lamps with replacement function only (DR01107,DR01108,DR01109,DR01110)

1 Please disconnect the power first when replacing the lamp

2 Pull out the lamp according to the three positions shown in the figure.

4.

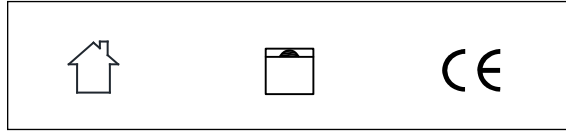

- This product is only suitable for indoor, it is not allowed to be rinsed with water.
- Independent external driver, recessed mounted.

5.

Do not clean LED chip and reflector with hand or towel !



- Use only drivers that comply with IEC or CE safety standards.
- Check if the power supply match with the luminaire.
- Must consider the maximum current value displayed on the label of the luminaire.
- The voltage displayed on the luminaire is not used to select the constant voltage driver, but the voltage covered by the selected constant current driver.
- Take suitable ESD measures to avoid touching bare conductors.
- LED chips can be damaged if be in touch with chemical material or gas. Therefore, it is not allowed to clean the LED housing or luminaire by chemicals.
- The following items are confirmed to have negative impact on the performance of the luminaire, avoid to keep luminaire in the same circumstance with them.
 - Methyl acetate or ethyl acetate (i.e., nail polish remover)
 - Cyanoacrylates (i.e., "Superglue")
 - Glycol ethers (including Radio Shack © Precision Electronics Cleaner - dipropylene glycol monomethyl ether)
 - Formaldehyde or butadiene (including Ashland PLIOBOND © adhesive)
 - Dymax 984-LVUF conformal coating
 - Loctite Sumo Glue. Loctite 384 adhesive. Loctite 7387 activator
 - Gorilla Glue. Bleach, Bleach-containing cleaners, sprays
- Remove the insulation material from the luminaire or provide enough space so that the temperature raising will not overpass the limited TC.
- LED chip is very sensitive to switching transients, therefore, LED lamps and appliances must be connected after power cut off, no hotswappable.
- Recommends using the driver indicated on the luminaire manual.
- Must consider the polarity of the product.
- If the external flexible cable or cord of this lamp is damaged, the cord should be replaced by the manufacturer or its service agent or a similarly qualified person
- The light source in this lamp should be replaced by the manufacturer or its service agent or a similarly qualified person

6.